



131 County Rd. 34 E. Jackson MN, 56143 1.800.446.8222
www.eagleplows.com

2824-ODES COMRADE PLOW MOUNT

Use the attached page to help with part identification during installation. We recommend using Loctite (Blue) on all fasteners.

Tools:	13mm Wrench
Ratchet	13mm Socket
10mm Socket	9/16 Socket

Plow Mount Installation:

STEP 1: Remove the six m6 bolts on the underside of the skid plate and both upper front m6 skid plate bolts and remove. Remove both m8 bolts holding the lower bumper tubes to the lower frame.

STEP 2: Place washer (Item 7) onto both 3/8 x 3 bolts (Item 8) and insert them through the two center holes on the plow mount (Item 2) and then through spacer (Item 1).

STEP 3: Hold the plow mount (Item 2) against the lower frame so that the two 3/8 x 3 bolts (Item 8) go through the lower bumper tubes and frame mount and loosely install 3/8 flange nuts (Item 5).

STEP 4: Prepare the five m6 bolts (Item 9) by placing one washer (Item 4) over each bolt. Loosely install the five m6 x 20mm bolts (Item 9) through the three slotted holes at the rear of the plow mount (Item 2) and through the two slotted holes at the front.

STEP 5: Place a 3/8 washer (Item 7) over the 3/8 x 1 1/4 bolt (Item 6) and loosely install through the front center plow mount hole with 3/8 flange nut (Item 5).

STEP 6: Square the mount up to the front of the machine and then fully tighten all of the hardware working in a crisscross pattern to keep the mount straight.

Attaching the Push Tube to the Plow Mount:

STEP 1: Roll the UTV over the push tube assembly.

STEP 2: Lift the push tube up to the plow mount and line the holes in the ears on the push tube up with the holes in the ears on the plow mount.

STEP 3: Insert each of the 3/4 x 2" clevis pins (Item 11) through the holes and secure in place using the hair pin clips (Item 12).

STEP 4: Attach the lift system of choice and the plow is ready for use.

Removing the Push Tube from the Plow Mount:

Reverse the previous steps to remove the push tube. Once the 3/4" pins are removed, place them back into the holes on the push tube assembly with the hair pin clips to prevent them from getting lost when the plow is not in use.

Additional Notes:

- (Optional) Mount the cable stop (Item 3) using the wire clip (Item 10) along the winch cable to prevent interference between the plow system and the machine when the plow is lifted.

It is the operator's responsibility to periodically check all fasteners/mounting hardware to ensure none have come loose during use and to check for any signs of wear.

Do NOT plow at speeds over 5mph. Doing so will void warranty on any parts that become damaged or break.

ITEM NO.	PART NUMBER	QTY.	DESCRIPTION
1	2824-2	2	SPACER, 0.630X1.25"
2	2824-4	1	PLOW MOUNT WLDMNT
3	3918-4	1	CABLE STOP
4	HDW151	5	WASHER, 1/4" FLAT, SAE, Z
5	HDW397	3	NUT, 3/8-16UNC HEX FLG SERRATED, ZINC
6	HDW417	1	BOLT, 3/8-16 X 1-1/4 HEX, Z
7	HDW1223	3	WASHER, 3/8" FLAT, SAE, Z
8	HDW1225	2	BOLT, 3/8-16 X 3 HEX GR5 Z
9	HDW1244	5	BOLT, M6 X 20MM, GR 8.8, ZN
10	HDW1247	1	3/16 IN WIRE ROPE CLIP
11	HDW1260	2	CLEVIS PIN, 3/4 X 2, ST,ZN
12	HDW1261	2	HAIRPIN, Ø1/8 X 2" Z

